Subject: Installation trimsender P/N 27 62 1 328 882

Diagram 1

INSTALLATION OF TRIMSENDER

1. Precheck:
   Before final installation check parts involved and familiarize with initial adjustment.

1.1 Temporarily connect trimsender with motorcable.

1.2 Wiring diagram:

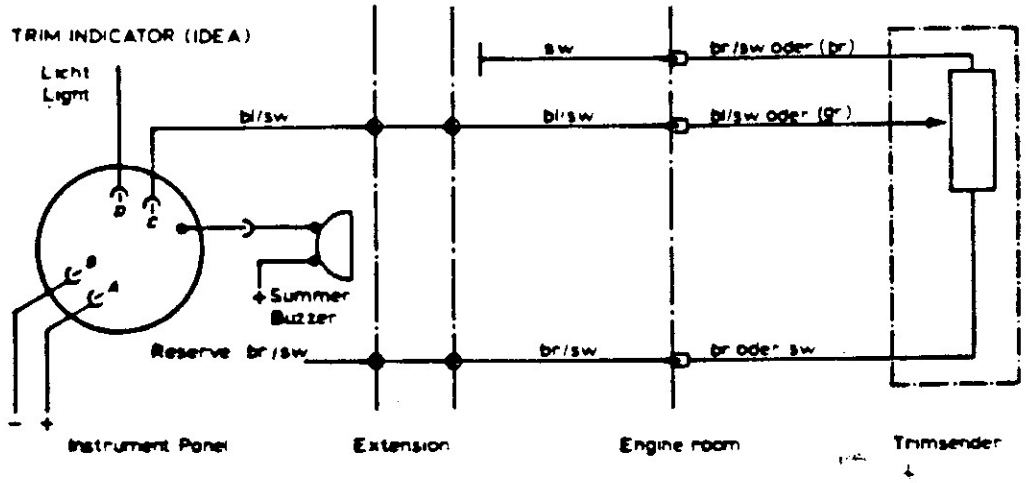

1.3 Install springclip in cavity of adjustment cover.

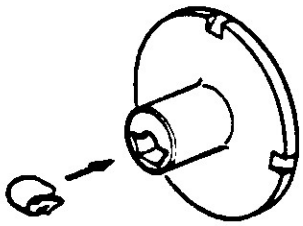

1.4 Carefully install cover on shaft of sender potentiometer.

1.5 Turn trimbolt carefully until trim indicator needle is on "O".
Attention: Overwinding will damage potentiometer. The endstop must be reached carefully and without force.

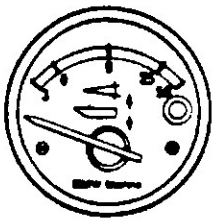

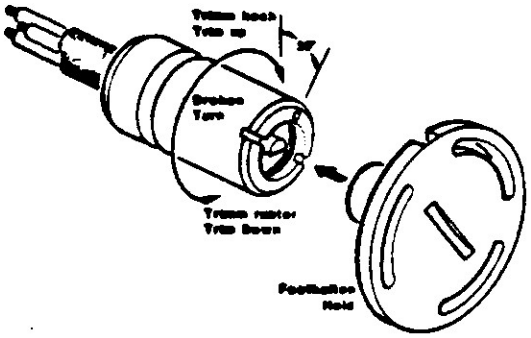

2. Position of trimsender:
   With outdrive completely down, bring the under point 1.5 adjusted trimsender in such a position that the 3 holes in gimbal ring align with the center of the cover sleeve holes. This position can respectively be turned for 120°.

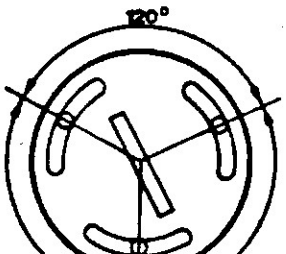

V12 Engineering
50, Ontario, Canada P0X 1C0
bmwmarine.net